

Crimson Trace

INSTALLATION INSTRUCTIONS

OWNER'S MANUAL ADDENDUM FOR:
LG-445

Springfield Armory XD
Full Size and Sub-Compact
Fits: .45ACP

L A S E R G R I P S[®]
Please read entire Owner's Manual prior to
installing and using your new Lasergrips.

Thank you for selecting the finest laser sighting system:
Crimson Trace Lasergrips.

When it comes to speed, accuracy and security, Crimson Trace is the top choice of law enforcement, militaries and legally armed citizens around the world.

OPERATING INSTRUCTIONS

The LG-445 is activated by a strategically located pressure pad. With a normal shooting grip, your middle finger will naturally hit the pressure pad whether shooting right or left-handed.

Master ON/OFF switch is located on the left-side of Lasergrips and is activated and deactivated by pressing master switch firmly for less than two seconds. **Turning the master switch "OFF" will NOT increase battery life.**

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Manual).
2. Place one battery straight down into battery well on each side, with the flat, (+) side visible.
3. Slide Lasergrips over firearm grip, rock back to allow Lasergrips to clear the front strap. Then rock Lasergrips forward (towards trigger) to allow the back of the laser to clear the backstrap and beavertail. Press firmly under the beavertail to seat Lasergrips. Ensure laser diode housing is firmly against frame.
4. If laser does not fully seat on frame, the grip needs to slide up further on the frame. Significant pressure may be required to seat grip. It will snap into place when fully seated.
5. Insert clip into back of lasergrip. Insert pin and use the armorer's tool to seat pin the rest of the way through the clip. The easiest way to do this is to use the side of the tool and apply pressure to pin using both thumbs. Use the rod to push the pin out to remove the clip. Block may need to be wiggled to align holes.
6. Lasergrips are default set at the factory to be in the "ON" position. Test the master on/off switch (located on the left side of Lasergrip) by pressing firmly for less than two seconds, and then pressing the activation pad. Laser should not activate. To turn back on, firmly press master on/off switch less than two seconds.
7. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50', but can be fine-tuned for windage and elevation.



MASTER ON/OFF SWITCH



ARMORER'S TOOL



BATTERIES:

Two (2) CR2032 or DL2032 lithium cells.

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

A. Attach the "Danger" warning label to the outside of the firearm.

B. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

MADE IN USA

Phone: (800) 442-2406 or (503) 783-5333 / Fax: (503) 783-5334
Customer Service E-mail: customer@crimsontrace.com

www.crimsontrace.com

9780 SW Freeman Drive, Wilsonville, OR 97070