

Crimson  **Trace**

INSTALLATION INSTRUCTIONS

OWNER'S MANUAL ADDENDUM FOR:

LG-480

Fits Walther PPK/S and PP

Does not fit Walther PPK

L A S E R G R I P S®

Please read entire Owner's Manual prior to installing and using your new Lasergrips.

Thank you for selecting the finest laser sighting system: Crimson Trace Lasergrips.

When it comes to speed, accuracy and security, Crimson Trace is the top choice of law enforcement, militaries and legally armed citizens around the world.



OPERATING INSTRUCTIONS

The LG-480 Lasergrips are instinctively activated by pressure from the middle finger pressing on the activation switch located on the frontstrap of the Lasergrips.

A master ON/OFF switch is also provided near the bottom of the left-side panel to turn the laser off. The laser should be left in the 'ON' position under most circumstances. **Turning the master switch "OFF" will NOT increase battery life.**

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that the chamber is empty. (See "Four Basic Safety Rules of Firearm Safety" in Owner's Manual.)
2. Install the batteries positive side up toward gun frame.
3. Install battery cover with frame side visible. Battery cover should snap into place on three snap posts.
4. Turn master switch on, verify the laser functions by pressing the activation button on front strap.
5. Wrap the Lasergrips around the gun frame.
6. If movement occurs or grip cannot fully seat on frame some adjustment may be required. Install the right side of the Lasergrips. Push on the right side grip to see if it moves forward and back.

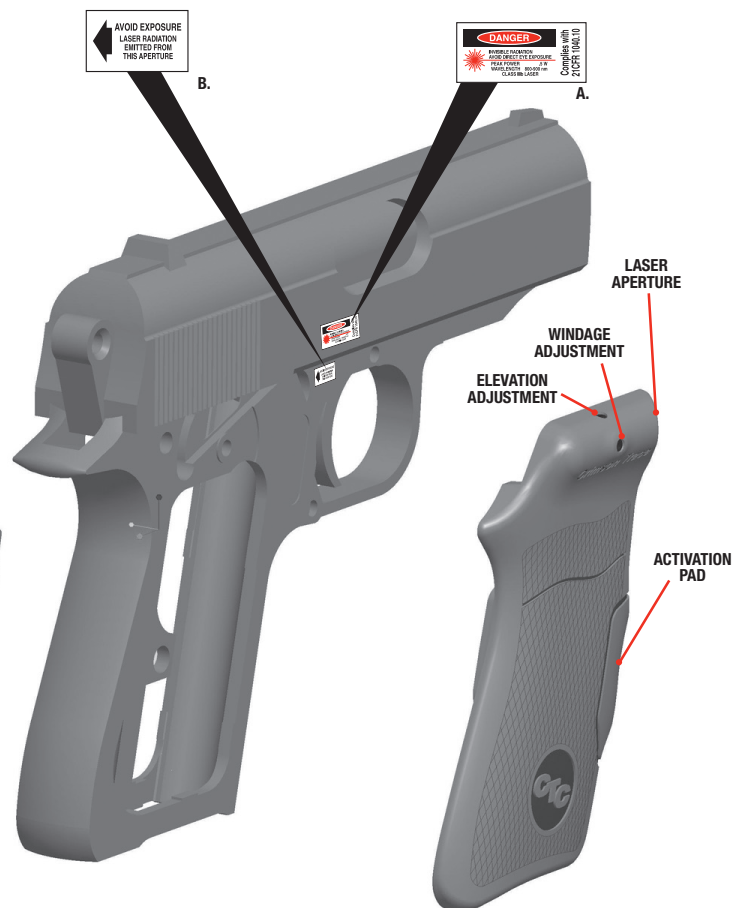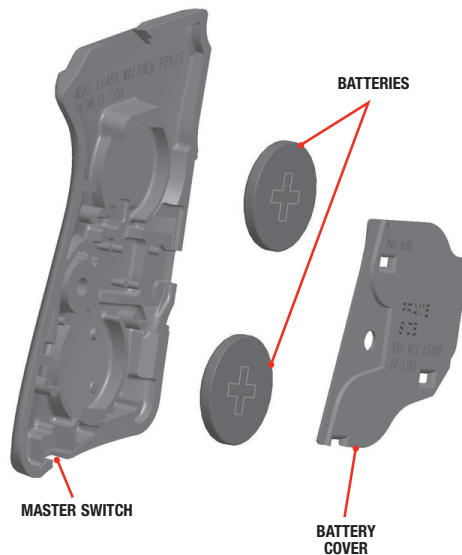

INSTALLATION INSTRUCTIONS CONTINUED ON BACK


INSTALLATION INSTRUCTIONS (CONT'D)

- Starting with the top cam, use the .050" hex key to adjust the cams built into the right side of the Lasergrip. The adjustment cams are located on the inside of the grip. Start by loosening the cam screw on the top cam 1 full turn. Move the cam to a higher number to make the grip fit tighter on the gun. Move the cam to a lower number to make the cam fit looser on the gun. The number should line up with the alignment arrow built into the grip. Adjust the cam one number at a time and refit the grip on to the gun between each adjustment.
- Repeat process with bottom cam, tightening the cam one number at a time until the grip is tight on the gun frame without any forward or backwards movement. Grip should be flush against frame all the way around.
- Stretch the front strap around the gun frame and install Walther grip screw from left side of grip. Screw should be snug but not over-tightened.
- To energize Lasergrips, push the master ON/OFF switch forward. The switch is located on the bottom left-side of the Lasergrips.
- Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory, but can be fine-tuned for windage and elevation. (See Lasergrips Owner's Manual for complete sighting info.)

FINAL NOTE: Any future removals of the Lasergrip will not require readjusting the adjustment cams or the laser sight. To install grip on another gun, remove from gun and follow cam installation instructions again.

BATTERIES:

Two (2) CR2032 or DL2032 lithium cells.

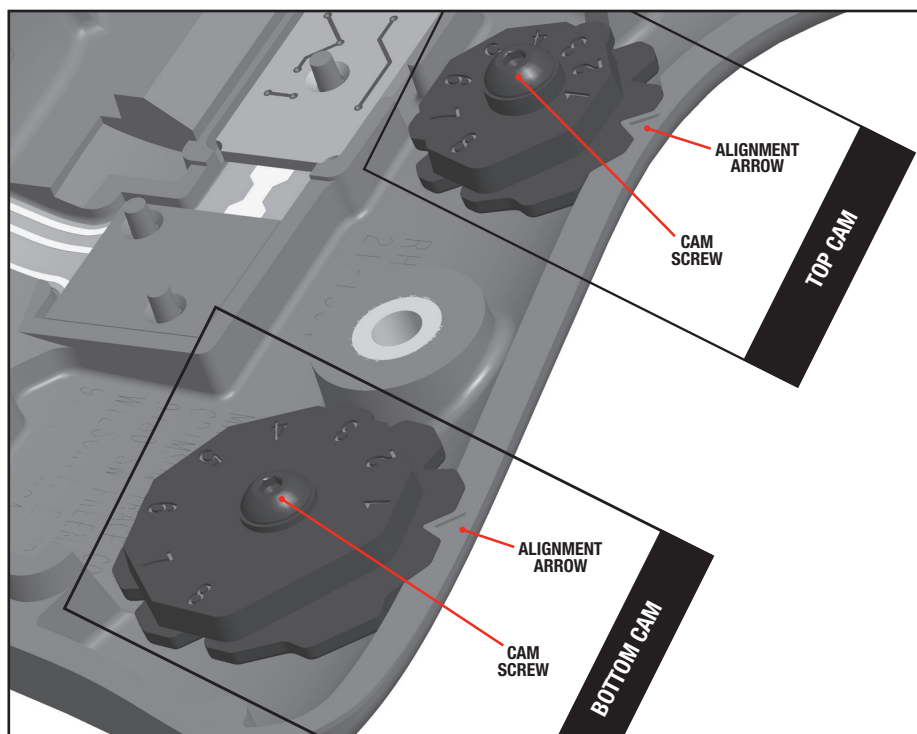

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- Attach the "Danger" warning label to the outside of the firearm.
- Attach the "Aperture" warning label with the arrow pointing to the laser diode lens.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

**MADE
IN USA**

27-4088 LG480

Phone: (800) 442-2406 or (503) 783-5333 / Fax: (503) 783-5334
Customer Service E-mail: customer@crimsontrace.com

www.crimsontrace.com

9780 SW Freeman Drive, Wilsonville, OR 97070

Rev 9/07