

OPERATING INSTRUCTIONS

The LG-401 is activated by a strategically located pressure pad. With a normal shooting grip, your middle finger will naturally hit the pressure pad whether shooting right or left-handed.

A master ON/OFF switch is also provided near the bottom of the left side panel to turn the laser off. The laser should be left in the ON position under most circumstances. Turning the master switch OFF will NOT increase battery life.

PLEASE READ ENTIRE OWNER'S MANUAL PRIOR TO INSTALLING AND USING YOUR NEW LASERGRIPS.

Crimson Trace
800-442-2406 or 503-783-5333
Fax: 503-783-5334
Customer Service E-Mail: customer@crimsontrace.com
www.crimsontrace.com

L A S E R G R I P S[®]

27-4096 10/10

www.crimsontrace.com

9780 SW Freeman Dr.
Wilsonville, OR 97070 USA
Tel: (800) 442-2406
Fax: (503) 783-5334



Crimson  **Trace**


Crimson  **Trace**

LG-401 for 1911 FULL-SIZE GOVERNMENT/COMMANDER

INSTALLATION HANDBOOK

L A S E R G R I P S[®]

THANK YOU FOR SELECTING THE FINEST LASER SIGHTING SYSTEM: **CRIMSON TRACE LASERGRIPS AND LASERGUARD**. WHEN IT COMES TO SPEED, ACCURACY AND SECURITY, CRIMSON TRACE IS THE TOP CHOICE OF LAW ENFORCEMENT, MILITARIES AND LEGALLY ARMED CITIZENS AROUND THE WORLD.

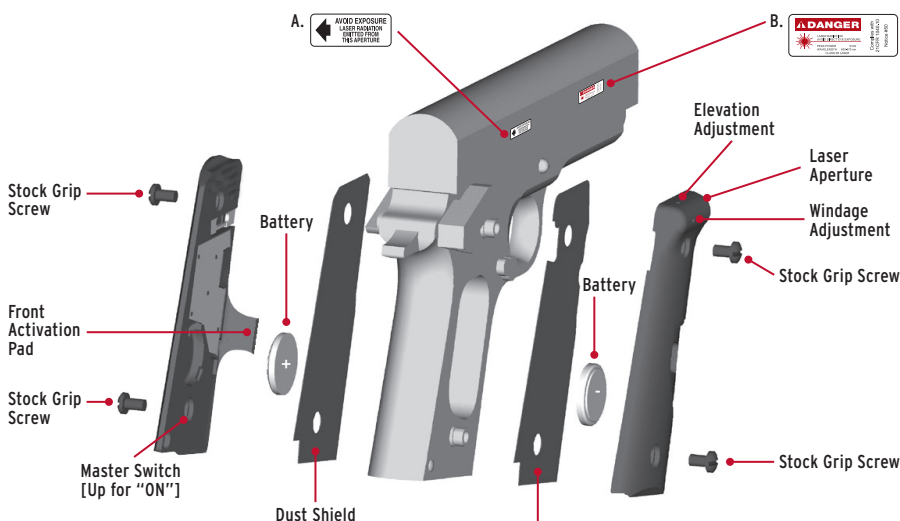


BATTERIES

Two (2) CR2032 or DL2032 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser
 DOT SIZE: Approximately 0.5 inches diameter at 50 feet
 BATTERIES: Two #2032 lithium batteries;
 over four hours of illumination
 ACTIVATION: Front-located integrated momentary
 pressure pad and master ON/OFF switch
 WARRANTY: Three-year full warranty
 This product complies with 21 CFR 1040.10

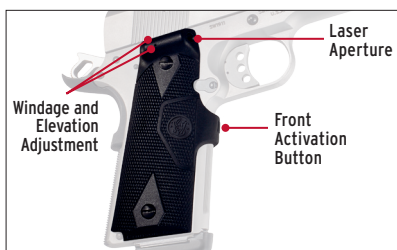

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Remove existing grips. Retain stock screws to be used with Lasergrips®.
3. Place one battery in each Lasergrips panel with positive (+) side up.
4. Install dust guard panels between Lasergrips and frame of pistol.
5. Wrap Lasergrips around frame of pistol. Replace and tighten screws.
6. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
7. To activate Lasergrips, slide the master ON/OFF switch forward to the ON position. The switch is located on the bottom left side of the Lasergrips. Press pressure activation pad located in center of rubber front strap directly beneath trigger guard to activate the laser.
8. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

IF YOUR 1911 HAS AN AMBIDEXTROUS SAFETY, THE RIGHT-SIDE PADDLE NEEDS TO BE SLIGHTLY SHORTENED TO CLEAR THE LASER HOUSING. PRE-SHORTENED ED BROWN SAFETIES ARE ALSO AVAILABLE FROM CTC. WE STRONGLY RECOMMEND THAT A QUALIFIED GUNSMITH PERFORM THESE MODIFICATIONS.

