



## BATTERIES

Two (2) CR2025 or DL2025 Lithium Cells.

## PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser

DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Two #2025 lithium batteries;  
over four hours of illumination

ACTIVATION: Rear located integrated momentary  
pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10



## INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove the magazine and double check that the chamber is empty. (See "Four Basic Rules of Firearm Safety" in Owner's Handbook.)
2. For safety and ease of installation, open slide of pistol and lock open.
3. Remove the trigger housing pin by pressing it out from right to left using supplied Crimson Trace Installation Tool.
4. Place one battery straight down into the round battery well in each side of the Lasergrips®, with the flat, (+) side visible.
5. Slide grip onto firearm starting at bottom of frame. Seat grip in place over the beavertail of the frame and line holes in grip up with trigger housing pin hole in frame and firmly hold in place.
6. Insert CTC supplied replacement trigger housing pin from left to right. Press Pin into place until evenly spaced with both sides of the grip.
7. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
8. Lasergrips are default set at the factory to be in the "ON" position. Test the master ON/OFF button (located on the backstrap of the Lasergrips) by pressing firmly on the master button. To turn off, firmly press master ON/OFF button. To activate Lasergrips, press pressure activation pad located on the backstrap of the Lasergrips, directly above the master ON/OFF button.
9. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front sight post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

## LASER SAFETY LABELING

**IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.**

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

