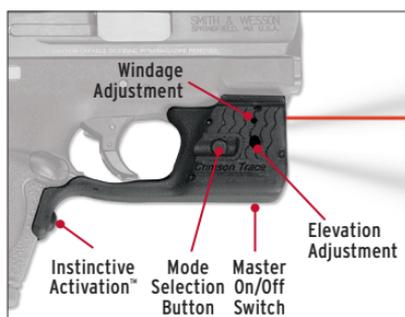


PRODUCT SPECIFICATIONS

- BEAM INTENSITY RED: 5mW peak, 620-670 nm, Class 3R laser
 BEAM INTENSITY GREEN: 5mW peak, 515-532 nm, Class 3R laser
 DOT SIZE: Approximately 0.5" diameter at 50 feet
 BATTERIES: One CR2 battery
 Red Laser: over four hours of illumination
 Green Laser: over two hours of illumination
 Light: approximately two hours of illumination
 LIGHT INTENSITY: 150-lumen LED
 ACTIVATION: Front-located integrated momentary pressure pad and master on/off
 MODES: Laser + Light, Laser only, Light only, Laser + Light Strobe
 WARRANTY: Three-year full warranty
 This product complies with 21 CFR 1040.10



*Image above only represents one of the LaserGuard Pro options.

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Place battery with the (+) side facing forward. Refer to image above.
3. Slide laser side of LaserGuard® Pro™ onto the trigger guard and snap into place. Ensure activation button hooks around the left side of the trigger guard and snaps into place on the front strap.
4. Hook left side of LaserGuard Pro into the right at an angle, by inserting into locking grooves located near activation button. Apply pressure to the front of both sides until both sides join together.
5. Install the three CTC provided screws into the left side (non-laser side) of the LaserGuard Pro using a Phillips screwdriver. Tighten together until there is no gap.
6. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
7. Slide master switch to the forward "on" position.
8. Press activation button to turn on laser. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. LaserGuard Pro is sighted-in at the factory at 50 feet, but can be fine-tuned for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)
9. Mode Selection: The LaserGuard Pro has been programmed with 4 Activation Modes for full user adaptability. It has been factory set to the Light/Laser Constant On Mode. To select desired mode start with the laser and light being off. Hold down the Instinctive Activation™ button and Mode Select button starting with Instinctive Activation. The module will begin to cycle through the modes. Release Mode button at desired mode.

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.