



PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 620-670 nm, Class 3R laser

DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Two #2032 lithium batteries;
over four hours of illumination

ACTIVATION: Dual side activation integrated momentary
pressure pads and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10



INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Remove existing grips. Retain stock screws to be used with Lasergrips®.
3. Place one battery in each Lasergrips panel with positive (+) side up.
4. Attach battery covers to each Lasergrips panels.
5. Wrap Lasergrips around frame of pistol. Replace and tighten screws.
6. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
7. To activate Lasergrips, slide the master ON/OFF switch up to the ON position. The switch is on the bottom left side of the Lasergrips. Press one of the dual side activation pressure pads located on either side of the Lasergrips.
8. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

PLASTIC BATTERY COVERS, LABELED L (LEFT) AND R (RIGHT) ARE INCLUDED WITH THE LG309. PLACE ONE BATTERY IN EACH PANEL WITH THE POSITIVE (+) SIDE UP. PLACE R BATTERY COVER OVER RIGHT BATTERY. HOLD PANEL AGAINST GUN FRAME WHILE INSTALLING SCREW TO ENSURE BATTERY COVER DOES NOT MOVE. THEN INSTALL LEFT PANEL THE SAME WAY.