
TAURUS 17*, 85, 94, 327 SIX-SHOT, 605, 650, 651, 731, 850, 905, 941 DOES NOT FIT PUBLIC DEFENDER OR POLYMER FRAMES. *EXCEPT TRACKER.

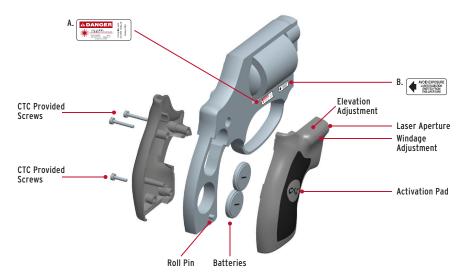

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 620-670 nm, Class 3R laser DOT SIZE: Approximately 0.5 inches diameter at 50 feet BATTERIES: Two #2032 lithium batteries:

over four hours of illumination
ACTIVATION: Front-located integrated momentary

pressure pad

WARRANTY: Three-year full warranty
This product complies with 21 CFR 1040.10



INSTALLATION INSTRUCTIONS

- Make sure firearm is unloaded. Open cylinder and double check that cylinder is empty. (See "Four Basic Rules Of Firearm Safety" in Laser Sight Owner's Handbook.)
- 2. Remove existing grips.
- 3. Place both batteries into the right side panel positive (+) side up.
- 4 Line up right-side of Lasergrips® to the right side of the frame and hold in place. Line up left side of Lasergrips to left side of frame and press both sides of grip together.
- 5. Insert the screws provided in your accessory pack as follows: (2) long screws into the holes at the top of the Lasergrip and the (1) short screw into the hole located on the bottom of the grip. Do not over tighten.
- Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
- Press pressure activation switch located in center of rubber front strap directly beneath trigger guard to activate the laser.
- 8. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFFTY LABFLING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Danger" warning label to the outside of the firearm.
- B. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.