

## PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 620-670 nm, Class 3R laser


DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Two #2032 lithium batteries;  
over four hours of illumination

ACTIVATION: Rear located integrated momentary  
pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10

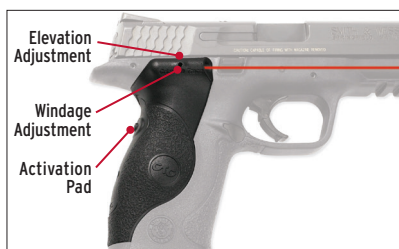

## INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Remove the frame tool from the bottom of the grip by rotating it 1/4 turn (either direction) and pulling it out of the frame. Also refer to S&W M&P Owner's Manual.
3. Remove existing backstrap by pulling down and off at an angle.
4. Place one battery straight down into the round battery well in each side of the Lasergrips®, with the flat, (+) side visible.
5. Slide Lasergrips onto frame of pistol at an angle (figure 1). Make sure tang tab on top of grip slides into hole in frame.
6. Replace frame tool, rotate into place.
7. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
8. Lasergrips are default set at the factory to be in the "ON" position. Test the master ON/OFF button (located on the backstrap of the Lasergrips) by pressing firmly on the master button. To turn off, firmly press master ON/OFF button. To activate Lasergrips, press pressure activation pad located on the backstrap of the Lasergrips, directly above the master ON/OFF button.
9. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

## LASER SAFETY LABELING

**IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.**

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.