



PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 515-532 nm, Class 3R laser

DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Four (4) #2016 lithium batteries;
over two hours of illumination

ACTIVATION: Front-located integrated momentary pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10



INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Open cylinder and double check that cylinder is empty. (See "Four Basic Rules Of Firearm Safety" in Laser Sight Owner's Handbook.)
2. Remove existing grips.
3. Place (2) #2016 batteries stacked (+) side up in top battery compartment. Place (2) #2016 batteries stacked (-) side up in lower battery compartment. See Figure 1.
4. Insert tabs of Battery Cover into slots and snap into place over batteries. See Figure 1.
5. Install CTC provided screw to lock in battery cover. See Figure 1.
6. Align both right and left grip panels with the frame and tighten both down using the two screws provided in accessory pack. Install longer screw in upper hole and shorter screw in lower hole.
7. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
8. To activate Lasergrips®, slide the master ON/OFF switch forward to the ON position. The switch is located on the bottom right side of the Lasergrips. Press pressure activation switch located in center of rubber front strap directly beneath trigger guard to activate the laser.
9. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.