

If Lasergrips Are Installed On A Polymer Frame, Place Shim (Included) In Grip As Indicated By The Image Above. Shim Will Insert In Either Direction.

BATTERIES

Two (2) CR2032 or DL2032 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser


DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Two #2032 lithium batteries;
over four hours of illumination

ACTIVATION: Front-located integrated momentary
pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10

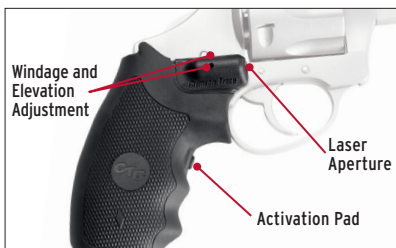

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Open cylinder and double check that cylinder is empty. (See "Four Basic Rules Of Firearm Safety" in Laser Sight Owner's Handbook.)
2. Remove existing grips.
3. Place both Batteries into the right side panel positive (+) side up.
4. If polymer frame, insert shim (included) as indicated on image above. If metal frame, shim is not required.
5. Line up right-side of Lasergrips® to the roll pin on the right side of the frame and hold in place. Line up left side of Lasergrips to the roll pin on left side of frame and press both sides of grip together.
6. Install smaller diameter screw into the lower hole on the grip and larger screw in the upper hole and tighten grips to frame.
7. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
8. To activate Lasergrips, slide the master ON/OFF switch forward to the ON position. The switch is located on the heel/bottom of the Lasergrips. Press pressure activation switch located in center of rubber front strap directly beneath trigger guard to activate the laser.
9. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Danger" warning label to the outside of the firearm.
- B. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

